## UTM 万能材料试验机程序安装说明

1. 打开随机光盘或硬盘 UTM 试验机软件文件夹



点击如下安装文件 UTM\_setup\_V1.0 进行安装。



点击 NEXT 进行安装

UIL Install VI.U:	Installation Folder
Setup will install UTM in the foll	owing folder. To install in a different folder, click Browse and
select another rolder, click this	tai to start the installation.
Destination Folder	
Destination Folder	Browse

默认路径 C:\UTM\,建议不要更改。

III Install VI.U: Installing		
		42
xecute: "C:\UTM\Setun\DNE20_SP2_co.exe"		
Extract: 测试报告1CN.doc Extract: 测试报告1CN.xls Output folder: C:\UTM Output folder: C:\UTM\lib Extract: uninstall.ico Output folder: C:\UTM\Setup Extract: DNF20_SP2_cn.exe 100% Extract: simsun.ttc 100% Install Font Font exist.Skip. .net Framework 2.0 ProductName: Execute: "C:\UTM\Setup\DNF20_SP2_cn.exe"	ř	
Extract: DNF20_SP2_cn.exe 100% Extract: simsun.ttc 100% Install Font Font exist.Skip. .net Framework 2.0 ProductName: Execute: "C:\UTM\Setup\DNF20_SP2_cn.exe"	ř	

安装过程。

	4
Completed	
	ш
Output folder: C:\UTM Delete file: C:\UTM\Setup\DNF20_SP2_cn.exe Delete file: C:\UTM\Setup\Setup\ Remove folder: C:\UTM\Setup\ Create folder: C:\Documents and Settings\Administrator\「开始」菜单\程序\UTM Create shortcut: C:\Documents and Settings\Administrator\桌面\UTM.lnk Create shortcut: C:\Documents and Settings\Administrator\「开始」菜单\程序\UT. Create shortcut: C:\Documents and Settings\Administrator\「开始」菜单\程序\UT. Created uninstaller: C:\UTM\uninstall.exe Completed	
м	
	Ional

点击 CLOSE 完成安装。 软件会自动创建桌面快捷方式

联想电脑 BIOS 中关闭串口唤醒功能,具体菜单如下:

Power-Automatic Power On-Wake form Serial Port Ring 更改为 Disabled

按住 shift 加 f10 出来一个框框 要是没有反应 就再加个 fn 出来框框之后 输入 oobe\bypassnro 敲击回车 会重启然后重新设置 中国 微软拼音 会多一个我没 有 internet